

Contents of Package

Left Side of OBox
(Inside View)

Right Side of OBox
(Inside View)

Top and Bottom of OBox
(Inside View)

(2) Horizontal Panels

(3) Vertical Panels


(10) Euroscrews

(8) Connector Bolts


(2) Hanging Brackets

(8) Cover Caps


Tools Required

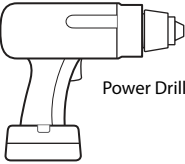

Power Drill




#2 Phillips Screwdriver



#2 Phillips Driver


Assembling the Shoe Cubby OBox

Step 1: Attach Hanging Brackets

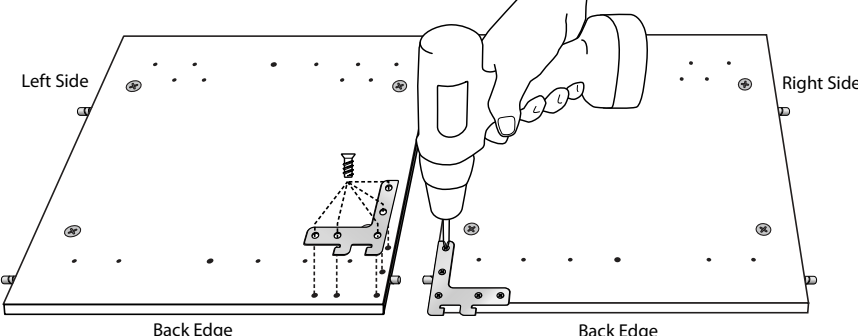


Attach Hanging Brackets to Sides using Euroscrews. (If using Power Drill, set torque to low setting.)

Step 2: Insert Connector Bolts

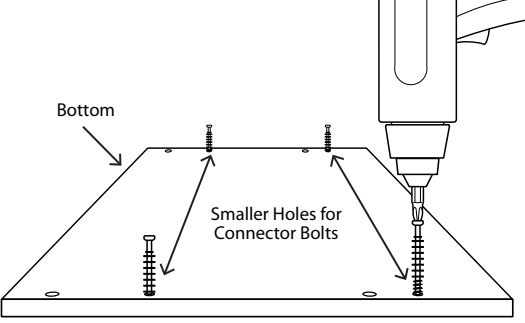


Insert (4) Connector Bolts into small holes on Top and Bottom Panels

Step 3: Attach Sides

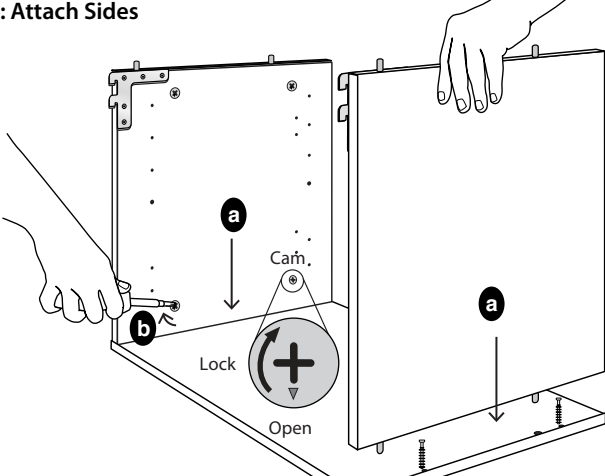


(a) Attach Sides to Bottom. (b) Lock Cam by turning clockwise until snug.

Step 4: Attach Top

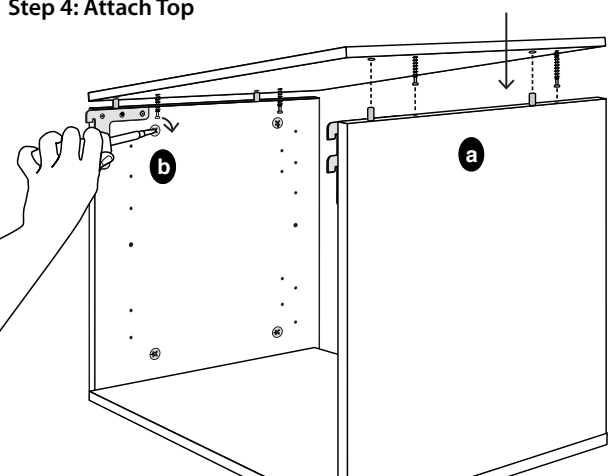


(a) Attach Top. (b) Tighten Cams same as in Step 3.

Step 5: Attach Cover Caps

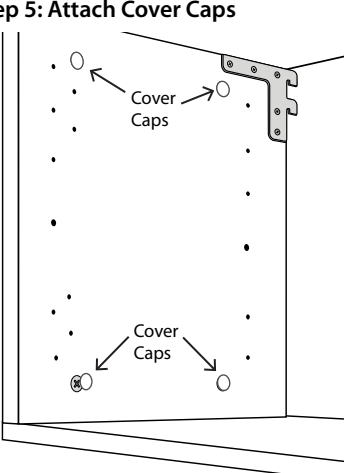


Apply Cover Caps to expose Cams.

Step 6: Assemble Dividers

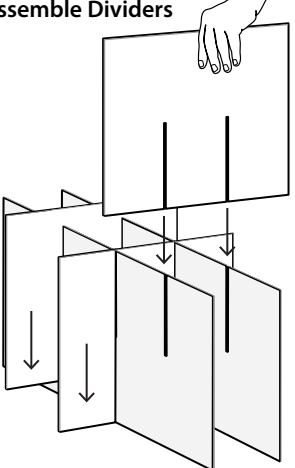

Step 7: Insert Cubby Assembly

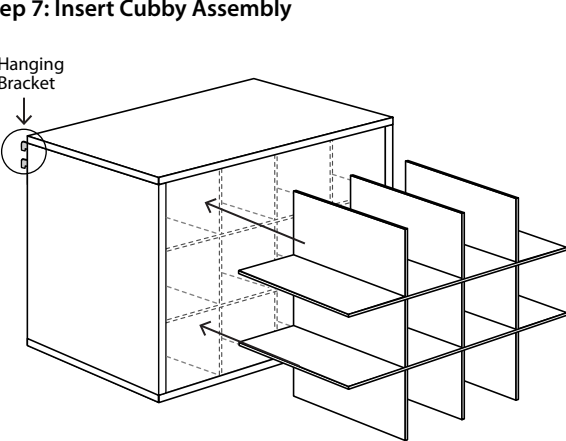

Fit is designed to be snug.
Mount OBox onto Uprights by inserting Hanging brackets into the innermost track of each Upright.

Proper Care for an OBox: Use Goo Gone™ or Simple Green® with a rag or putty knife to remove any excess glue or marring that was caused by shipping or assembly.

June 2015

OrganizedLiving.com
1-800-699-3225

©2015 Organized Living
Bloomington, IN 47403